Wed Jul 01 17:50:00 CDT 2015

# **Project Information**


Project Name	Dummy Project
Project Description	Dummy Description
Installed By	Person
Installer Number	12345678
Room Name	Dummy Room
Room/Support Number	04123456
Help Desk Number	04111111

### **Controller Information**

AMX Controller	NX-1200
IP Address/DNS Name	192.168.0.99
RPM Configuration Manager Link	192.168.0.99/web/module/RPM/obc/#
RMS Server URL	http://dummyrms.com
RMS User Name/Password	client/password
RMS Version	4.4
RMS Scheduling Notes	Click here for additional RMS Installation Notes

Dummy Project AMX LLC © 2012-2015 Page 1


# **Device Count Listing**

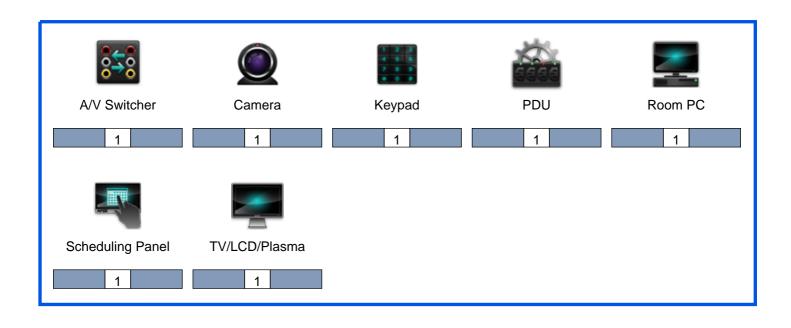


# **Device Configuration Information**


Device	Description	Control Information
Camera	Panasonic AW-HE60	IP: 192.168.0.55 Video Presense Macro Generated Signal Cable: HDMI Device Details Information
Dummy Keypad	MET-7E-WH	Device ID: 8001
Dummy LCD	Samsung DB55D	Serial-Baud: 9600 Control Cable: FG10-1717-01
Dummy Sched Panel	MXD-430	Device ID: 10101 Vision2 URL: http://dummyvisionurl.com Theme: 480x800-Scheduling
Dummy Switcher	SDX-410-DX	Device ID: 5201 Input Count: 4 Output Count: 1 Volume Control: Dummy LCD Output Cable 1: HDMI
PDU	NXA-PDU-1508-8	Outlet 1: Camera Outlet 2: Dummy LCD Outlet 3: Room PC Device ID: 192
Room PC	Room PC	Video Presense Macro Generated Signal Cable: HDMI

#### **NX-1200 Control Connections**

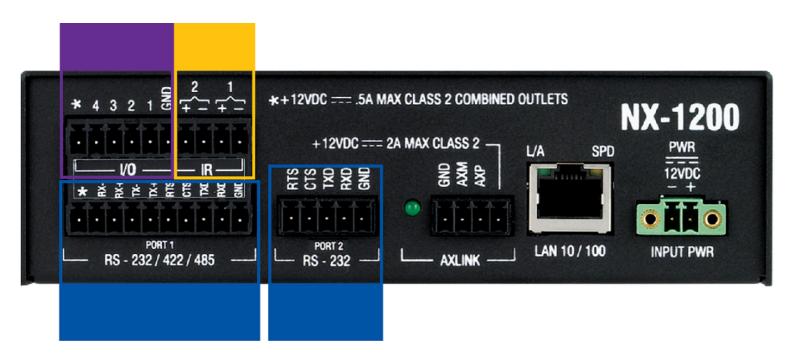


### SDX-410-DX Video Input/Output Connections




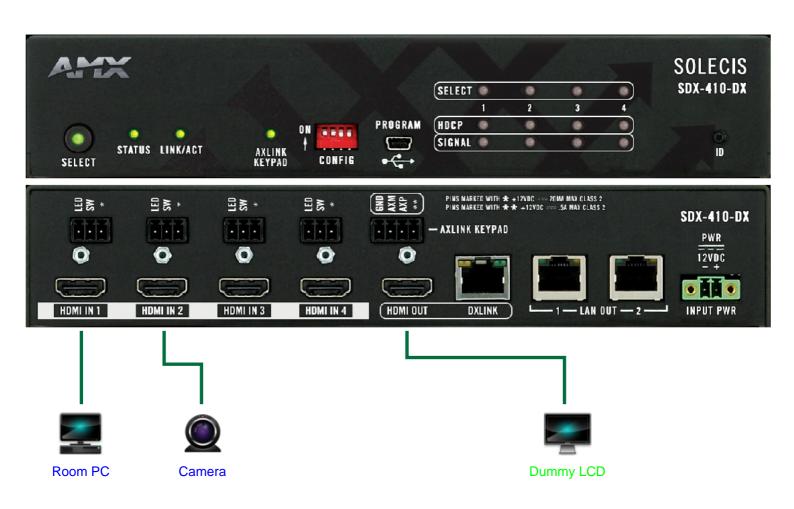


Output Device	Connection Port
Dummy LCD	PC





### A/V Connections

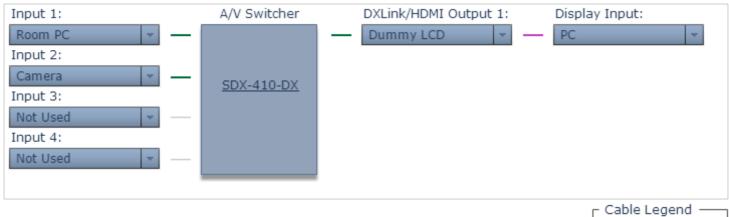


#### NXA-PDU-1508-8 Connections





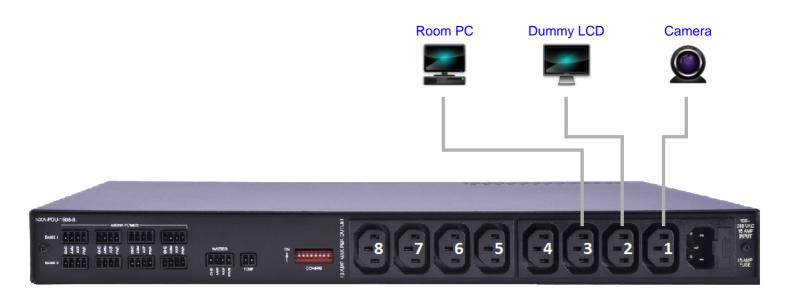

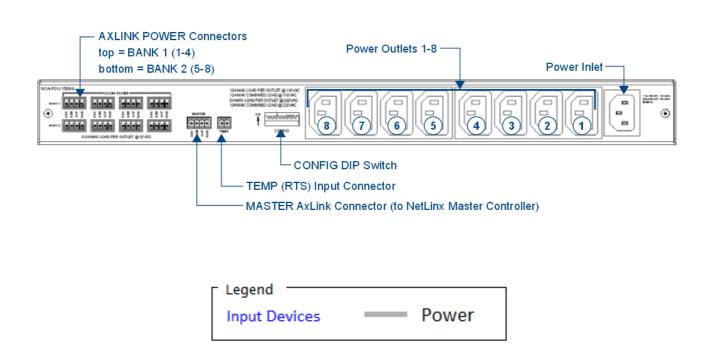

### **Macro Definitions**

	System Off	System Macro
Dummy LCD:Power	off	
Camera:Power Of	f	

		System On	System Macro
	<no macro="" steps<="" th=""><th>s Available&gt;</th><th></th></no>	s Available>	
_			

	Room PC - On Trigger Delay: 1 second	Video Presence On
Dummy LCD:Power	o On	
Dummy Switcher:	Switch All-Room PC, Dummy LCI	)
Dummy LCD:Input	E-PC	

		Camera - On Trigger Delay: 1 second	Video Presence On
	Camera:Power Or	1	
	Dummy LCD:Power	On	
	Dummy Switcher	Switch All-Camera, Dummy LCD	
_	Dummy LCD:Input	:-PC	


	Room PC - Off Trigger Delay: 1 minute	Video Presence Off
Dummy LCD:Power	Off	

	Camera - Off Trigger Delay: 1 minute	Video Presence Off
Camera:Power Of Dummy LCD:Power		

# Keypad Diagram - Dummy Keypad





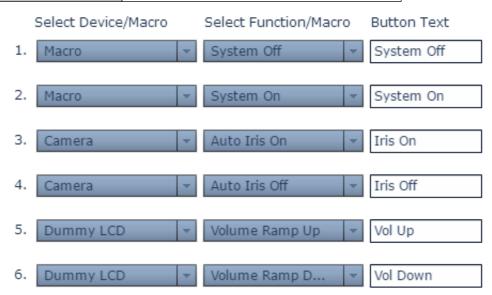

# RMS Scheduling Panel - Dummy Sched Panel MXD-430



Dummy Sched Panel Theme: 480x800-Scheduling Device ID: 10101 Background Color: [#324B73 -- R:50 G:75 B:115]


Vision2 Logo --- URL: http://dummyvisionurl.com



# Cable Diagram - FG10-1717-01

Device Samsung : DB55D

Remote Control Connector Information Cable FG Number: 10-1717-01

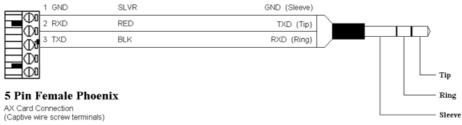

3.5 mm Stereo Phone Plug

Revision Rev 1

#### Legend

GND = Ground RXD = Receive Data

TXD = Transmit Data

#### **Connector Type**

3,5 mm (1/8 in) Stereo Mini Phone Plug

#### **Type of Control**

RS-232

#### Supported AMX Devices

AXC-232

AXCENT2 AXB-232+

#### Function Note

Tip is pin 1, ring is pin 2, sleeve is pin 3.



#### Wed Jul 01 17:50:01 CDT 2015

Project Name	Dummy Project
Project Description	Dummy Description
Installed By	Person
Dealer Account Name	Pro AV Solutions (NSW)
Dealer Account Number	35f14967-d029-dc11-b7de-00188b451fc8
Dealer Contact Name	Joshua M Anderson

# **Project Devices**



Qty	Model	Description	Part Number
1	NX-1200	NX-1200 NetLinx Integrated Controller	FG2106-01
1	MXD-430	4.3" Modero X Series Wall/Flush Mount Touch Panel	FG5968-15
1	MET-7E-WH	Metreau 7-Button Ethernet Keypad-Black	FG5793-03-BL
1	SDX-410-DX	Solecis 4x1 HDMI Digital Switcher with DXLink Output	FG1010-304
1	NXA-PDU-1508-8	Power Distribution Unit (110V/220V)	FG673-01

Dummy Project AMX LLC © 2012-2015 Page 12

#### Recommended Accessories

Qty	Model	Description	Part Number
1	PS-POE-AT-TC	High-Power PoE Injector 802.3AT Compliant	FG423-84
8	CC-C14-NEMA	C14 to NEMA Power Cable for the AMX PDU Device	FG10-673-02
1	4 PIN FEMALE PHOENIX	1/8"(3.5mm) stereo plug (mini) To 4p Phoenix femal	FG10-1717-01
2	HDMI Cable	Signal Cable	

### **Third Party Devices**

Qty	Device Type	Make	Model
1	Camera	Panasonic	AW-HE60
1	TV/LCD/Plasma	Samsung	DB55D
1	Room PC	Room PC	Room PC

Please Note: Equipment specification is for reference only. You may require a different voltage frequency, color or configuration than specified in the report.

Dummy Project AMX LLC © 2012-2015 Page 13